



# BLUETOOTH WATCH

## GB-5600AA/AB

User's Guide for Mobile Link Functions

for GALAXY

### Read This First!

#### Getting Ready

#### Checking the Connection between the Watch and Phone

#### Using Mobile Link Functions

#### Setting Up Mobile Link Functions

#### Supplementary Information

#### Detailed Menu

#### Procedure Reference

MA1308-G

## GB-5600AA/AB

# User's Guide for Mobile Link Functions (for GALAXY)

This watch includes functions that allow it to communicate with Bluetooth® 4.0 (referred to as "Bluetooth" in this manual) capable mobile phones and other devices. Mobile Link functions make it possible, to sound an alert tone, perform vibration alert, or display alerts when a phone call and/or mail is received on your phone, and to perform other functions.

This manual explains the Mobile Link functions of the GB-5600AA/AB (referred to as "the watch" or "this watch" in this manual). For details about watch functions, see the "User's Guide for Watch Functions" that comes with the watch.

### Important!

- To use the watch's Mobile Link functions so it can communicate with a mobile phone (GALAXY S4), you will need to install an [application specified by CASIO](#) (G-SHOCK+ app) on your phone.
- Make sure you always keep your G-SHOCK+ app updated to the latest version.
- The Mobile Link functions you will be able to use depend on the version of the G-SHOCK+ app that you have installed on your phone.

### Important!

- You will need to reconnect the watch and phone manually following any of the operations below.
  - Entering and then exiting the phone's Airplane Mode
  - Disabling and then enabling the phone's Bluetooth
  - Turning the phone off and then on

Before re-connecting, be sure to tap the G-SHOCK+ icon on the Home Screen to restart the G-SHOCK+ app. For more information about re-connecting, see "[To re-connect manually after a connection is cut](#)".

### Important!

- Performing the Mobile Link [Phone Finder](#) operation causes your phone to emit a loud tone. Do not perform this operation when listening to phone

audio output through headphones.

- GALAXY S is a registered trademark of Samsung Electronics Co., Ltd.
- Bluetooth® is a registered trademark or trademark of Bluetooth SIG, Inc. of the United States.



# BLUETOOTH WATCH

## GB-5600AA/AB

User's Guide for Mobile Link Functions

for GALAXY

Main Menu

### Read This First!

Mobile Link Function Precautions

Legal Precautions  
Precautions when Using Mobile Link Functions

Disabling Signal Emission from the Watch

Power Saving Precautions

Mobile Link Features

Terminology

Tap Operations

### Getting Ready

Checking the Connection between the Watch and Phone

Using Mobile Link Functions

Setting Up Mobile Link Functions

Supplementary Information

## Mobile Link Function Precautions


### Legal Precautions

- This product complies with or has received approval under radio laws in various countries and geographic areas. Use of this product in an area where it does not conform to or where it has not been approved under applicable radio laws may be punishable under local laws. For details, see the separate "List of Countries and Geographic Areas where Product Conforms to Radio Laws or Has Been Approved".
- Use of this product inside of an aircraft is restricted by the aviation laws of each country. Be sure to obey instructions provided by flight personnel concerning use of devices such as this product.

### Precautions when Using Mobile Link Functions

- Keep the phone close to (within about two meters of) the watch during use. Objects (walls, furniture, etc.) and/or the structure of the building you are in can greatly reduce the communication range.
- Communication may also be affected by other equipment (electrical equipment, AV equipment, OA equipment, etc.) An operating microwave oven in particular can affect communication and even make communication impossible. Use of this watch may also cause interference in TV or radio reception, and disturb video images.
- Since the Bluetooth function of this watch uses the same frequency band (2.4 GHz) as wireless LAN devices, its use in proximity of a LAN device may cause radio interference, slow down the data rates of the watch and other nearby wireless LAN devices, and cause signal noise and connectivity problems.


### Disabling Signal Emission from the Watch

The Bluetooth icon (  ) on the watch display, either flashing or not flashing, indicates that the watch is emitting radio signals.

When you are in a hospital, an aircraft, or anywhere else where the use of radio signals prohibited, you can disable the emission of signals by holding down **C** in the Timekeeping Mode. This will also cause the Bluetooth icon to disappear from the watch display.

## Detailed Menu

### Procedure Reference

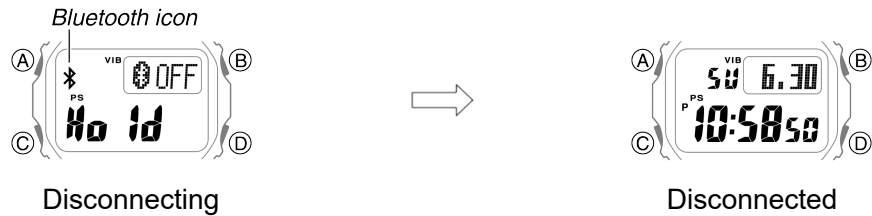

There is no connection between the watch and phone when the Bluetooth icon is not on the display. For more information, see "[Disabling Bluetooth on the Watch](#)".

## Power Saving Precautions

[Power Saving](#) is enabled under initial factory default settings.

When Power Saving is enabled and there is a connection between the watch and a phone, the watch will automatically cut the connection and enter a Power Saving state (returns to the Timekeeping Mode, Power Saving icon flashing on the display) if the watch is not moved or if you do not perform any button operation for about an hour.



# BLUETOOTH WATCH

## GB-5600AA/AB

User's Guide for Mobile Link Functions

for GALAXY

Main Menu

### Read This First!

Mobile Link Function Precautions

Legal Precautions

Precautions when Using Mobile Link Functions

Disabling Signal Emission from the Watch

Power Saving Precautions

Mobile Link Features

Terminology

Tap Operations

### Getting Ready

Checking the Connection between the Watch and Phone

Using Mobile Link Functions


Setting Up Mobile Link Functions

Supplementary Information

## Mobile Link Features

 **AT** [Time Adjustment](#)

This feature automatically updates the watch's time setting in accordance with the time on the mobile phone.

 [Alert Notification \(Incoming Call, Incoming Mail, and Other Phone Events\)](#)

The watch beeps or vibrates, and displays an alert when a call or mail message is received by the phone.

 [Phone Finder](#)

You can perform an operation on the watch that will cause your phone to emit sound to help you remember where you left it.

 [Link Loss Alert](#)

The watch will vibrate or emit a tone for one second to let you know when the connection between the phone and watch is cut.

 [Auto Reconnection](#)

Simply moving the watch will cause it to re-connect automatically to the phone.

**Detailed Menu**

---

**Procedure  
Reference**

---



# BLUETOOTH WATCH

## GB-5600AA/AB

User's Guide for Mobile Link Functions

for GALAXY

Main Menu

### Read This First!

#### Mobile Link Function Precautions

Legal Precautions

Precautions when Using Mobile Link Functions

Disabling Signal Emission from the Watch

Power Saving Precautions

#### Mobile Link Features

Terminology

Tap Operations

### Getting Ready

### Checking the Connection between the Watch and Phone

### Using Mobile Link Functions

### Setting Up Mobile Link Functions

### Supplementary Information

## Terminology

The table below explains some of the terminology used in this manual.

This term:	Means this:
phone	A GALAXY S4 mobile phone that communicates with the watch.
Timekeeping Mode, Setup Mode	Watch modes. Refer to the "User's Guide for Watch Functions" for full details.
Bluetooth	Communication standard for short distance wireless communication. This watch uses Bluetooth® v4.0.
double-tap	Tapping the center of watch face lightly, twice in succession, with your fingertip. See " <a href="#">Tap Operations</a> ".
notification	The phone informing the watch using Bluetooth communication that some event (incoming call, mail message receive, phone alarm, etc.) occurred on the phone.
alert	Watch tone, vibration, and/or display to let you know that a notification of some event was received from the phone. The watch will also perform an alert operation for watch alarms and other watch-based events that are independent of phone notifications.

**Detailed Menu**

---

**Procedure  
Reference**

---





# BLUETOOTH WATCH

## GB-5600AA/AB

User's Guide for Mobile Link Functions

for GALAXY

Main Menu

### Read This First!

#### Mobile Link Function Precautions

Legal Precautions

Precautions when Using Mobile Link Functions

Disabling Signal Emission from the Watch

Power Saving Precautions

#### Mobile Link Features

Terminology

Tap Operations

### Getting Ready

### Checking the Connection between the Watch and Phone


### Using Mobile Link Functions

### Setting Up Mobile Link Functions

### Supplementary Information

## Tap Operations

To perform a tap operation, lightly tap the center of the watch display with your fingertip.

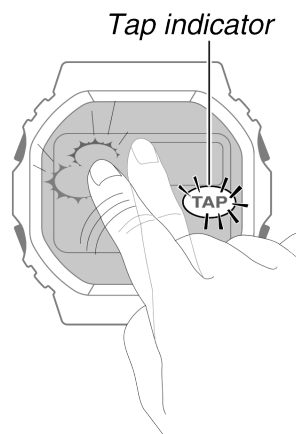

Example: Tap twice to stop an ongoing tone or vibration alert for a watch alarm.

#### How to tap:

Lightly strike the watch display twice with the tip of your finger. (double-tap)

#### Important!

- The tap function is enabled only while the Tap indicator is flashing on the watch display.
- The Tap indicator flashes automatically whenever the tap function is enabled for the following reasons: to stop the phone's phone finder tone, to stop a watch alarm or time up alert, etc.

**Detailed Menu**

---

**Procedure  
Reference**

---



# BLUETOOTH WATCH

## GB-5600AA/AB

User's Guide for Mobile Link Functions

for GALAXY

Main Menu

### Read This First!

### Getting Ready

#### Pairing the Watch with a Phone

To pair the watch with a phone

To re-pair the watch with the phone

#### G-SHOCK+ app Overview

Top Menu

### Checking the Connection between the Watch and Phone

### Using Mobile Link Functions

### Setting Up Mobile Link Functions

### Supplementary Information

### Detailed Menu

### Procedure Reference

## Pairing the Watch with a Phone

Before the watch can communicate with a phone, they must be "paired", which means they are registered with each other. When the watch is paired with a phone, they become connectable.

### Important!

Before performing the pairing operation, be sure to download [G-SHOCK+ app](#) and install it on your phone (GALAXY S4).

#### Note

- Note that the watch can be paired with only one phone at a time.
- If the watch is already paired with a phone, you will need to perform the operations under "[To re-pair the watch with the phone](#)".

### To pair the watch with a phone


1. Move the phone you plan to pair with close to (within one meter of) the watch.

#### On the phone:

2. On the Home Screen tap the G-SHOCK+ icon.
  - This will display the top menu of the G-SHOCK+ app.
3. Tap "Discover G-SHOCK".
  - If the phone's Bluetooth is disabled, a dialog box will appear telling you to turn it on. Tap "OK" to enable Bluetooth.
  - A message will appear telling you that your phone is searching for a watch.

#### On the watch:


4. In the Timekeeping Mode, hold down **C** for about two seconds until the screen shown below appears.

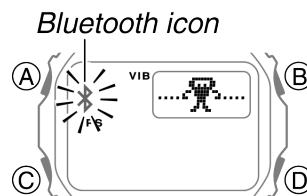

- The Bluetooth icon will flash, indicating that the phone is searching for the watch.

#### **On the phone:**

- When the phone discovers the watch, the message "CASIO GB-5600A\* Discovered" will appear on the phone display. Tap the message.
  - After short while, a six-digit passkey number will appear on the display of the watch. Within 30 seconds after the passkey number appears, perform step 6 to input it on the phone.

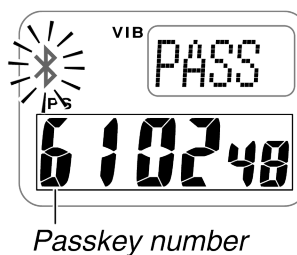

- Use the keypad that appears on the display of the phone to input the passkey number displayed on the watch's display, and then tap "OK".

#### **On the watch:**

- Confirm that pairing is complete.
  - It takes about 20 seconds for a pairing operation to be performed.

#### **When pairing is successful:**

The watch vibrates or beeps to let you know.


The watch returns to the Timekeeping Mode with the Bluetooth icon displayed (not flashing).

#### **Important!**

Once you pair the watch with a phone, you will be able to connect them with each other without performing the pairing operation again (unless you clear the watch's or phone's pairing information). For information about connection with a phone that the watch has already been paired with, see "[To re-connect manually after a connection is cut](#)".

**When pairing is not successful:**

The watch returns to the Timekeeping Mode with the Bluetooth icon not displayed.

In this case, tap  in the upper right corner of the phone display to return to the top menu of the G-SHOCK+ app, and then perform the above steps again starting from step 3.

**Note**

If you are unable to pair the watch with the phone successfully, it may be due to one of the reasons below.

- The passkey number you input on the phone is wrong.
- You did not input the passkey number on the phone within 30 seconds after the number appeared on the watch display.
- Something happened (the phone was moved outside the communication range of the watch, phone power was turned off, etc.) to make communication between the watch and phone impossible before pairing could be completed.

**To re-pair the watch with the phone****On the watch:**

1. Check to confirm that the Bluetooth icon is not on the watch display. If it is, enter the Timekeeping Mode and then hold down **C** for about two seconds until the Bluetooth icon disappears.


**On the phone:**

2. Clear the phone's pairing information.
  - (1) On the top menu of the G-SHOCK+ app, tap the following items in sequence: "General" - "Delete pairing".
  - (2) On the screen that appears, tap "Delete pairing".

**On the watch:**

3. Clear the watch's pairing information.
  - (1) In the Timekeeping Mode, press **C** five times.

This enters the Setup Mode. This displays the Bluetooth Device Name Screen shown below.

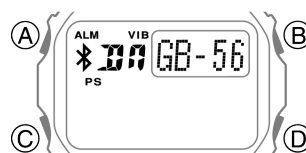

## Bluetooth Device Name Screen

(The message "GB-5600A\*" will scroll from right to left.)

(2) Hold down **D** for about two seconds.

The message "NOT YET PAIRED!" will scroll from right to left on the display after pairing information is cleared.

4. Perform the procedure under "[To pair the watch with a phone](#)".



# BLUETOOTH WATCH

## GB-5600AA/AB

User's Guide for Mobile Link Functions

for GALAXY

Main Menu

### Read This First!

### Getting Ready

#### Pairing the Watch with a Phone

To pair the watch with a phone

To re-pair the watch with the phone

#### G-SHOCK+ app Overview

Top Menu

### Checking the Connection between the Watch and Phone

### Using Mobile Link Functions

### Setting Up Mobile Link Functions

### Supplementary Information

### Detailed Menu

### Procedure Reference

## G-SHOCK+ app Overview

The G-SHOCK+ app runs in the background, serving as a bridge between the phone and watch.

### Top Menu

The top menu of the G-SHOCK+ app has three types of buttons (a, b, c, below). Whether a button is displayed in the top menu depends on the current state of the phone.

- Not paired with a watch (initial state)
- Connected with the watch
- Not connected with the watch

Button	Phone State	Description
Discover G-SHOCK	a	Tap to start <a href="#">pairing</a> with the watch. See " <a href="#">To pair the watch with a phone</a> ".
General	a,b,c	Tap to configure the background and language settings of the G-SHOCK+ app, and to <a href="#">clear pairing information</a> .
Go to help site	a,b,c	Tap to start up web browser and access the G-SHOCK+ app help site.
Go to G-SHOCK site	a,b,c	Tap to start up web browser and access the G-SHOCK site.
CASIO GB-5600A* Connected	b	Indicates whether the phone and watch are connected.
Settings	b	Tap to configure phone settings, such as what types of notifications should be sent to the watch, etc.
Link check	b	Tap to have the phone sound the watch tone in order to confirm that the phone and watch are

Button	Phone State	Description
		connected. See " <a href="#">To check the connection from the phone</a> ".





# BLUETOOTH WATCH

## GB-5600AA/AB

User's Guide for Mobile Link Functions

for GALAXY

Main Menu

### Read This First!

### Getting Ready

### Checking the Connection between the Watch and Phone

#### Checking the Connection

To check the connection from the phone

#### Auto Re-connect

To re-connect manually after a connection is cut

What to do if you cannot re-connect

#### Power Saving

Exiting Power Saving

Turning Power Saving On or Off


To turn Power Saving on or off



#### Link Loss

To re-connect manually after Link Loss

#### Disabling Bluetooth on the Watch

## Checking the Connection

You can find out if the watch is connected with the phone by checking the Bluetooth icon (  ) on the watch display. You can also perform a [connection check operation on the phone to sound the watch's tone](#).

 Displayed	Connected (Mobile Link functions enabled.)
 Flashing	The connection has been temporarily lost and the phone is searching for the watch. After a while, the icon will stop flashing (connected) or disappear from the screen (connection lost). Refer to the sections listed below. <a href="#">Auto Reconnection</a> <a href="#">Power Saving</a> <a href="#">Link Loss</a>
Not displayed	The connection between the watch and phone has been lost. Refer to the sections described below. <b>Causes for loss of connection:</b> <ul style="list-style-type: none"> <li>• Entering the <a href="#">Power Saving</a> mode</li> <li>• Failure to re-connect automatically following <a href="#">Link Loss</a></li> <li>• <a href="#">Disabling Bluetooth on the watch</a></li> <li>• <a href="#">Turning off the phone</a></li> <li>• <a href="#">Entering the phone's Airplane Mode</a></li> <li>• <a href="#">Turning off the phone's Bluetooth</a></li> <li>• Exiting the G-SHOCK+ app</li> <li>• Low watch batteries (See the "User's Guide for Watch Functions".)</li> </ul> <b>How to Re-connect:</b>

To disable the watch's Bluetooth manually

To re-connect after disabling the watch's Bluetooth manually

#### Phone Power Off

To re-connect after turning your phone back on

#### Phone Airplane Mode and Bluetooth Off

To re-connect after entering the phone's Airplane Mode or after turning off the phone's Bluetooth

#### Using Mobile Link Functions

#### Setting Up Mobile Link Functions

#### Supplementary Information

#### Detailed Menu

#### Procedure Reference

- [To re-connect manually after a connection is cut](#)

### To check the connection from the phone

On the top menu of the G-SHOCK+ app, tap "Link check". If the watch's tone sounds, it means that the phone and watch are connected.

### Auto Reconnection

In the cases described below, the watch and phone will re-connect automatically.

#### Link Loss

(Example: When communication is temporarily cut when the distance between the watch and phone becomes too great.)

#### Auto re-connect conditions:

If the phone is moved close to the watch while the Bluetooth icon is flashing, they will re-connect within about one minute\* and the icon will stop flashing.




#### Power Saving

(Example: Watch removed from the wrist and not moved for about one hour)

#### Auto re-connect conditions:

Putting the watch back on or otherwise moving it will cause the Bluetooth icon to start flashing. If the phone is moved close to the watch while the Bluetooth icon is flashing, they will re-connect within about one minute\* and the icon will stop flashing.

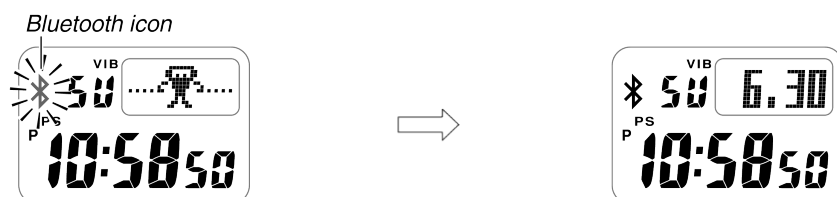

If re-connection is not performed automatically (Bluetooth icon disappears from the display), perform the operation under "[To re-connect manually after a connection is cut](#)".


### To re-connect manually after a connection is cut

#### Important!

After entering and exiting the phone's Airplane Mode, after turning Bluetooth off and then back on again, or after turning the phone off and then back on again,

be sure to tap the G-SHOCK+ icon on your phone's Home Screen to restart the G-SHOCK+ app before performing the steps below.

### On the phone:

1. Check to make sure that your phone's Bluetooth is enabled.
  - (1) If you can see the Bluetooth icon (  ) in the status bar at the top of the phone's display, it means that Bluetooth is enabled, and you can proceed to step 2. If there is no Bluetooth icon, perform steps (2) and (3) below.
  - (2) Scroll the status bar downwards so the Notification panel is displayed.
  - (3) Tap "Bluetooth" to enable Bluetooth.
2. Move the phone close to (within one meter of) the watch.

### On the watch:

3. In the Timekeeping Mode, hold down **C** for about two seconds until the screen shown on the left below appears.



- The Bluetooth icon will flash, indicating that the phone is searching for the watch. Wait for about one minute. If the watch's Bluetooth icon stops flashing and remains displayed, it means that re-connection was successful.
- If the Bluetooth icon is no longer displayed, restart the above procedure from step 1.
- If re-connection is not successful after several tries, see "[What to do if you cannot re-connect](#)".

### What to do if you cannot re-connect

Perform the procedure under "[To re-pair the watch with the phone](#)".



# BLUETOOTH WATCH

## GB-5600AA/AB

User's Guide for Mobile Link Functions

for GALAXY

Main Menu

### Read This First!

### Getting Ready

### Checking the Connection between the Watch and Phone

#### Checking the Connection

To check the connection from the phone

#### Auto Re-connect

To re-connect manually after a connection is cut

What to do if you cannot re-connect

#### Power Saving

##### Exiting Power Saving

##### Turning Power Saving On or Off

To turn Power Saving on or off

#### Link Loss


To re-connect manually after Link Loss

#### Disabling Bluetooth on the Watch

## Power Saving

Power Saving is triggered if the watch is not moved and no button operation is performed for about one hour. The following explains what happens while the watch is in the Power Saving mode.

- The Power Saving indicator changes from displayed to flashing.

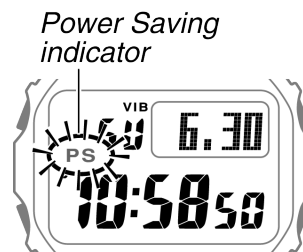

- The connection with the phone is cut, so Mobile Link functions are disabled. (All other functions continue to operate.)
- This returns to the Timekeeping Mode.


#### Note

The Power Saving indicator indicates that Power Saving is enabled. You can disable Power Saving, if you want. For more information, see "[Turning Power Saving On or Off](#)".

### Exiting Power Saving

Putting the watch back onto your wrist or otherwise moving it (or pressing any button) will exit Power Saving and automatically try to re-connect with the phone.

When re-connection is successful, the watch will perform [Auto Time Adjustment](#).

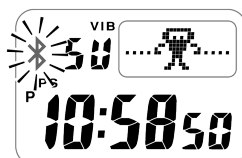

Trying to re-connect



Re-connect successful

#### Note

- If re-connection fails because the phone is too far away from the watch, the watch will enter the [Link Loss](#) state.

To disable the watch's Bluetooth manually

To re-connect after disabling the watch's Bluetooth manually

#### Phone Power Off

To re-connect after turning your phone back on

#### Phone Airplane Mode and Bluetooth Off

To re-connect after entering the phone's Airplane Mode or after turning off the phone's Bluetooth

- When moving the watch you may note a slight rattling sound inside of it. This is due to operation of a switch that determines the current orientation of the watch, and does not indicate malfunction.

### Turning Power Saving On or Off


Power Saving is enabled under initial default settings. You can disable Power Saving, if you want.

#### Important!

Using Mobile Link functions while Power Saving is disabled will shorten battery life.


#### To turn Power Saving on or off

1. In the Timekeeping Mode, hold down **A** for about two seconds until the Time Zone Setting Screen appears.
  - [SET Hold] will appear on the watch display, followed by the Time Zone Setting Screen.

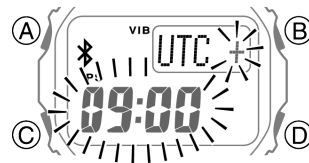

Time Zone Setting Screen

2. Press **C** 11 times to display the Power Saving Setting Screen shown below.

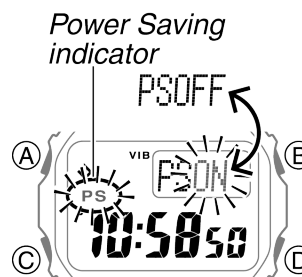

Power Saving Setting Screen

- Depending on the current Power Saving setting, either [PSON] (Power Saving ON) or [PSOFF] (Power Saving OFF) will be displayed.
3. Press **D** to toggle the setting between [PSON] and [PSOFF].
  4. Press **A** to return to the Timekeeping Mode.
    - Selecting [PSON] causes the Power Saving icon to appear on the display. The icon is not displayed when [PSOFF] is selected.

#### Using Mobile Link Functions

#### Setting Up Mobile Link Functions

#### Supplementary Information

#### Detailed Menu

#### Procedure Reference





# BLUETOOTH WATCH

## GB-5600AA/AB

User's Guide for Mobile Link Functions

for GALAXY

Main Menu

### Read This First!

### Getting Ready

### Checking the Connection between the Watch and Phone

#### Checking the Connection

To check the connection from the phone

#### Auto Re-connect

To re-connect manually after a connection is cut

What to do if you cannot re-connect

#### Power Saving

Exiting Power Saving

Turning Power Saving On or Off

To turn Power Saving on or off

#### Link Loss


To re-connect manually after Link Loss

#### Disabling Bluetooth on the Watch

## Link Loss

The connection between the watch and phone is cut temporarily whenever the distance between the two becomes too great or if signal conditions become bad for some reason. This causes the watch to go into a Link Loss state.

When Link Loss occurs, the watch will vibrate or beep for about one second and then start trying to re-connect. At this time the Bluetooth icon will flash and the Link Loss Screen shown below will appear on the display.

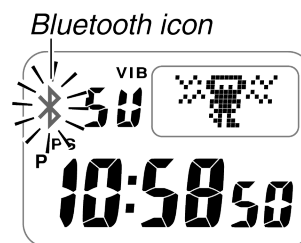

Link Loss Screen

### If the watch is able to re-connect automatically with the phone after entering the Link Loss state:

The watch will return to the Timekeeping Mode with the Bluetooth icon displayed (not flashing).

### If the watch is not able to re-connect automatically with the phone after entering the Link Loss state:

- The watch will beep to let you know it is temporarily suspending attempts to re-connect and return to the Timekeeping mode. In this case the Bluetooth icon disappears from the display and connection remains cut.
- After that, the watch will automatically try to re-connect approximately at 10-minute intervals. During each re-connection try, the Bluetooth icon will flash on the watch display and the Link Loss Screen will be displayed.
- If the watch is unable to re-connect with the phone within about one hour, it will [disable Bluetooth](#), which causes the Bluetooth icon to disappear from the display. In this case, the connection will remain cut until it is re-established manually.

### To re-connect manually after Link Loss

**To disable the watch's Bluetooth manually**

**To re-connect after disabling the watch's Bluetooth manually**

### **Phone Power Off**

**To re-connect after turning your phone back on**

### **Phone Airplane Mode and Bluetooth Off**

**To re-connect after entering the phone's Airplane Mode or after turning off the phone's Bluetooth**

---

## **Using Mobile Link Functions**

---

### **Setting Up Mobile Link Functions**

---

### **Supplementary Information**

---

### **Detailed Menu**

---

### **Procedure Reference**

---

Perform the procedure under "[To re-connect manually after a connection is cut](#)".





# BLUETOOTH WATCH

## GB-5600AA/AB

User's Guide for Mobile Link Functions

for GALAXY

Main Menu

Read This First!

Getting Ready

Checking the Connection between the Watch and Phone

Checking the Connection

To check the connection from the phone

Auto Re-connect

To re-connect manually after a connection is cut

What to do if you cannot re-connect

Power Saving

Exiting Power Saving

Turning Power Saving On or Off

To turn Power Saving on or off

Link Loss

To re-connect manually after Link Loss

Disabling Bluetooth on the Watch

## Disabling Bluetooth on the Watch

The watch emits radio signals while Bluetooth is enabled. If you want to stop the emission of radio signals (because you are in a hospital, an aircraft, or somewhere else radio signals are controlled), you can manually disable Bluetooth.

### Important!

Manually disabling Bluetooth also disables [Auto Reconnection](#).

### To disable the watch's Bluetooth manually

1. Check to confirm that the Bluetooth icon is on the watch display.
2. In the Timekeeping Mode, hold down **C** for about two seconds until the Bluetooth icon disappears from the display.



### To re-connect after disabling the watch's Bluetooth manually

Perform the procedure under "[To re-connect manually after a connection is cut](#)".

**To disable the watch's Bluetooth manually**

**To re-connect after disabling the watch's Bluetooth manually**

#### **Phone Power Off**

**To re-connect after turning your phone back on**

#### **Phone Airplane Mode and Bluetooth Off**

**To re-connect after entering the phone's Airplane Mode or after turning off the phone's Bluetooth**

---

### **Using Mobile Link Functions**

---

#### **Setting Up Mobile Link Functions**

---

#### **Supplementary Information**

---

#### **Detailed Menu**

---

#### **Procedure Reference**

---



# BLUETOOTH WATCH

## GB-5600AA/AB

User's Guide for Mobile Link Functions

for GALAXY

Main Menu

### Read This First!

### Getting Ready

### Checking the Connection between the Watch and Phone

#### Checking the Connection

To check the connection from the phone

#### Auto Re-connect

To re-connect manually after a connection is cut

What to do if you cannot re-connect

#### Power Saving

Exiting Power Saving

Turning Power Saving On or Off

To turn Power Saving on or off

#### Link Loss

To re-connect manually after Link Loss

#### Disabling Bluetooth on the Watch

## Phone Power Off

Turning off the power of the phone connected to the watch automatically causes the [watch's Bluetooth to be disabled](#). Even if the power of the phone is turned back on, the watch's Bluetooth remains disabled and [Auto Reconnection](#) is not performed.

### To re-connect after turning your phone back on

1. On the phone's Home Screen, tap the G-SHOCK+ icon to restart the application.
2. Perform the procedure under "[To re-connect manually after a connection is cut](#)".

**To disable the watch's Bluetooth manually**

**To re-connect after disabling the watch's Bluetooth manually**

### **Phone Power Off**

**To re-connect after turning your phone back on**

### **Phone Airplane Mode and Bluetooth Off**

**To re-connect after entering the phone's Airplane Mode or after turning off the phone's Bluetooth**

---

## **Using Mobile Link Functions**

---

### **Setting Up Mobile Link Functions**

---

### **Supplementary Information**

---

### **Detailed Menu**

---

### **Procedure Reference**

---



# BLUETOOTH WATCH

## GB-5600AA/AB

User's Guide for Mobile Link Functions

for GALAXY

Main Menu

### Read This First!

### Getting Ready

### Checking the Connection between the Watch and Phone

#### Checking the Connection

To check the connection from the phone

#### Auto Re-connect

To re-connect manually after a connection is cut

What to do if you cannot re-connect

#### Power Saving

Exiting Power Saving

Turning Power Saving On or Off

To turn Power Saving on or off

#### Link Loss

To re-connect manually after Link Loss

#### Disabling Bluetooth on the Watch

## Phone Airplane Mode and Bluetooth Off

Entering your phone's Airplane Mode will automatically turn off your phone's Bluetooth and the watch's Bluetooth. Because of this, the watch will not perform [Auto Reconnection](#) when you exit the phone's Airplane Mode. Auto Reconnection also will not be performed if you disable the phone's Bluetooth and then re-enable it.

### To re-connect after entering the phone's Airplane Mode or after turning off the phone's Bluetooth

1. On the phone's Home Screen, tap the G-SHOCK+ icon to restart the application.
2. Perform the procedure under "[To re-connect manually after a connection is cut](#)".

**To disable the watch's Bluetooth manually**

**To re-connect after disabling the watch's Bluetooth manually**

### **Phone Power Off**

**To re-connect after turning your phone back on**

### **Phone Airplane Mode and Bluetooth Off**

**To re-connect after entering the phone's Airplane Mode or after turning off the phone's Bluetooth**

---

## **Using Mobile Link Functions**

---

### **Setting Up Mobile Link Functions**

---

### **Supplementary Information**

---

### **Detailed Menu**

---

### **Procedure Reference**

---



# BLUETOOTH WATCH

## GB-5600AA/AB

User's Guide for Mobile Link Functions

for GALAXY

Main Menu

Read This First!

Getting Ready

Checking the Connection between the Watch and Phone

Using Mobile Link Functions

Adjusting the Watch's Current Time to the Phone's Time

Auto Time Adjustment Using Mobile Link

Manual Time Adjustment Using Mobile Link

To obtain time information from the phone manually

To send time information from the phone to the watch manually

Alert Notification (Incoming Call, Incoming Mail, and Other Phone Events)

Incoming Call Notification

## Adjusting the Watch's Current Time to the Phone's Time

There are various ways to adjust the times of the watch and phone.

- [Auto Time Adjustment Using Mobile Link](#)
- [Manual Time Adjustment Using Mobile Link](#)
- Manual Time Adjustment without Using Mobile Link  
Refer to the "User's Guide for Watch Functions".

If you use Mobile Link, the time on the watch is adjusted to the time on the connected phone.

### Note

The watch will not perform any alert operation if an incoming call or mail message is received by the phone while time adjustment is being performed with Mobile Link.

### Auto Time Adjustment Using Mobile Link

With this method, the watch obtains time information (time zone, date, current time, summer time setting) from the phone and adjusts its current time setting automatically.

The following explains the timing for obtaining time information from the phone.

- Immediately after [pairing](#) between the watch and phone is complete.
- When the watch and phone are reconnected after recovering from [Power Saving](#).
- When the watch and phone are re-connected after [Bluetooth was disabled](#).
- Whenever the phone time settings are automatically changed due to movement to a different time zone or summer time on/off. (This feature can be disabled by an application setting.)

### Note

In addition to the above, the watch may also automatically adjust to the phone time when communication is performed between the watch and phone.

Incoming Mail  
Notification

Incoming SNS  
Notification or  
Calendar  
Notification

Using Phone  
Finder

To use the watch to  
find your phone

Setting Up Mobile  
Link Functions

Supplementary  
Information

Detailed Menu


Procedure  
Reference

## Manual Time Adjustment Using Mobile Link


You can manually adjust the watch time to the phone time information (time zone, current date, current time, summer time) at any time.

There are two ways to do this: using the watch to obtain time information from the phone and using the phone to send time information to the watch.

### To obtain time information from the phone manually

1. Check to confirm that the Bluetooth icon (  ) is on the watch display.
2. In the Timekeeping Mode, hold down **A** for at least five seconds. Keep **A** depressed until both of the operations described below are complete.
  - [SET Hold] appears on the display after about two seconds, and then the Time Adjustment Screen shown below appears.


Normal button operation is not possible while this screen is displayed.

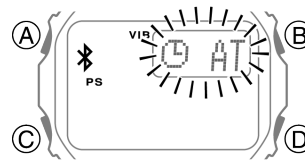

Time Adjustment Screen

- Time adjustment takes about one minute. After that, the normal timekeeping screen will appear.

### To send time information from the phone to the watch manually

1. Check to confirm that the Bluetooth icon (  ) is on the watch display.
2. On the top menu of the G-SHOCK+ app, tap the following items in sequence: "Settings" - "Time adjustment" - "Send time data".
  - This will cause the Time Adjustment Screen to appear on the watch display for about one minute.

Normal button operation is not possible while this screen is displayed.





# BLUETOOTH WATCH

## GB-5600AA/AB

User's Guide for Mobile Link Functions

for GALAXY

Main Menu

Read This First!

Getting Ready

Checking the Connection between the Watch and Phone

Using Mobile Link Functions

Adjusting the Watch's Current Time to the Phone's Time

Auto Time Adjustment Using Mobile Link

Manual Time Adjustment Using Mobile Link

To obtain time information from the phone manually


To send time information from the phone to the watch manually

Alert Notification (Incoming Call, Incoming Mail, and Other Phone Events)

Incoming Call Notification

## Alert Notification (Incoming Call, Incoming Mail, and Other Phone Events)

Whenever the phone notifies the watch of an incoming call, incoming mail, incoming SNS, or calendar alarm, the watch will sound a tone and/or vibrate, and an indication will appear on the watch display.\*

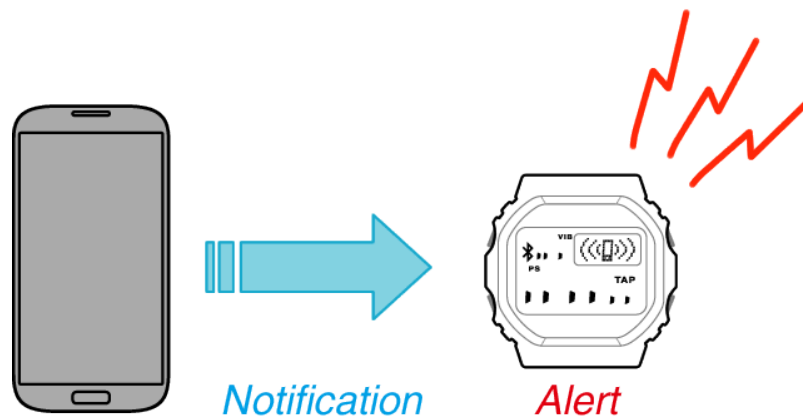

\* Phone events that are alerted on the watch depend on how phone settings are configured.

[Incoming Call Notification](#)

[Incoming Mail Notification](#)

[Incoming SNS Notification or Calendar Notification](#)

### Note

You can also configure settings to control the type of alert performed by the watch for each type of phone notification. For more information, see "[Configuring Watch Alert Operation Settings](#)".

### Incoming Call Notification

The watch will alert you when a call is received by the phone.

Alert Method

## Incoming Mail Notification

## Incoming SNS Notification or Calendar Notification

## Using Phone Finder

To use the watch to find your phone


## Setting Up Mobile Link Functions

## Supplementary Information

## Detailed Menu

## Procedure Reference

- Under initial settings, incoming call alerts are indicated by a two-second tone and vibration ([Type b](#)), and by display indication.
- The watch first displays an incoming call icon, which is then followed by display of the caller information (caller name or phone number). You can also configure watch settings to display an [animated figure](#).

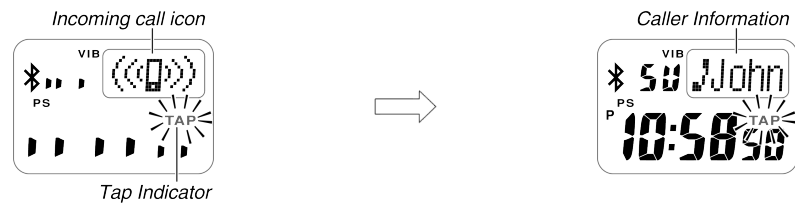

## Stopping the Alert Operation

Perform either of the operations described below.

- While the tap indicator (TAP) is flashing, [double-tap](#) the watch display. This will stop the tone/vibration of the phone, and stop the watch alert operation (tone, vibration, display indication).
- Press any watch button. This will stop the watch alert operation (tone, vibration, display indication) only.

## Important!

Even if you [double-tap](#) the watch display to stop an incoming call tone/vibration alert, the connection with the incoming call is maintained on the phone without being answered. To answer the call or to put the call on hold, you need to perform the required operation on the phone itself.

## Note

- Certain phone settings and sender languages can cause incorrect display of sender information.
- If you do not use one of the operations under "Stopping the Alert Operation" to stop an incoming call, the caller's information will remain displayed on the watch. Initially, the information will scroll from right to left for about two or three minutes. After that, the first five characters of the information will remain statically displayed. Press any button to return to the Timekeeping Mode and clear the caller information. Once cleared, the caller information cannot be re-displayed.


## Incoming Mail Notification

The watch will let you know when the G-SHOCK+ app receives mail.

### Alert Method

- Under initial settings, incoming mail alerts are indicated by a two-second tone and display indication.

- The watch first displays an incoming mail icon, which is then followed by information about the message type and by sender information (sender name, sender mail address, or sender phone number). Sender information may not appear under certain conditions.

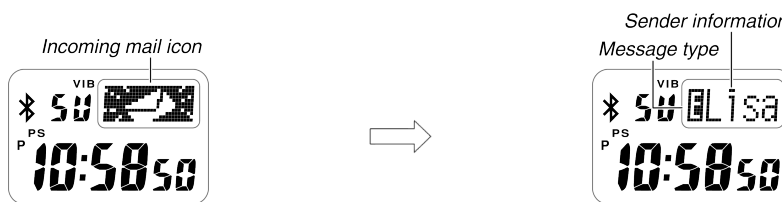

### Stopping the Alert Operation

Press any button. This will stop all watch alert operations (tone, vibration, display).

### Incoming SNS Notification or Calendar Notification

The watch will let you know when an SNS message (Twitter, Facebook) is received on the phone. It will also notify you when there is a phone alert for a Calendar event registered on the phone.

### Alert Method

Under initial settings, the watch will beep for five seconds and display an icon indicating the notification type. After that a message (text, symbols, etc.) about the event details will be displayed.

### Example icons



### Stopping the Alert Operation

Press any button. This will stop all watch alert operations (tone, vibration, display).



# BLUETOOTH WATCH

## GB-5600AA/AB

User's Guide for Mobile Link Functions

for GALAXY

Main Menu

### Read This First!

### Getting Ready

### Checking the Connection between the Watch and Phone

### Using Mobile Link Functions

#### Adjusting the Watch's Current Time to the Phone's Time

Auto Time Adjustment Using Mobile Link

Manual Time Adjustment Using Mobile Link

To obtain time information from the phone manually

To send time information from the phone to the watch manually

#### Alert Notification (Incoming Call, Incoming Mail, and Other Phone Events)

Incoming Call Notification


## Using Phone Finder


You can perform an operation on the watch that will cause your phone to emit sound to help you remember where you left it. The phone finder operation forces the phone to emit a tone, even if it is in the silent mode.

### Important!

- Do not use this function in areas where sounding of phone tones is not allowed.
- This function can cause loud volume sound to be output by the phone, which can damage your hearing. Do not trigger a phone finder operation while listening to phone output over headphones.

### To use the watch to find your phone

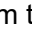1. Check to confirm that the Bluetooth icon (  ) is on the watch display.
2. In the Timekeeping Mode, hold down **D** for about one second.
  - This will display the screen shown below and sound a tone on the phone.

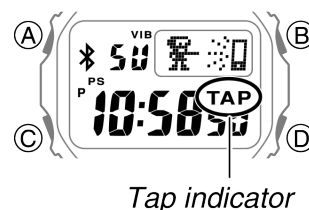

3. The tone produced by the phone continues for about one minute. If the watch's display shows a flashing Tap indicator, you can stop the tone by [double-tapping](#) the watch display. You can also stop it by performing some operation on the phone.
  - You can stop the phone tone by double-tapping the watch display only if the Tap indicator is flashing on it. The Tap indicator flashes for about 15 seconds. To stop the tone after the flashing Tap indicator disappears, perform some operation on the phone, or hold down **D** again for about one second to display the flashing Tap indicator, and then double-tap the watch display.

**Incoming Mail  
Notification**

**Incoming SNS  
Notification or  
Calendar  
Notification**

**Using Phone  
Finder**

To use the watch to  
find your phone

---

**Setting Up Mobile  
Link Functions**

---

**Supplementary  
Information**

---

**Detailed Menu**

---

**Procedure  
Reference**

---



# BLUETOOTH WATCH

## GB-5600AA/AB

User's Guide for Mobile Link Functions

for GALAXY

Main Menu

Read This First!

Getting Ready

Checking the Connection between the Watch and Phone

Using Mobile Link Functions

Setting Up Mobile Link Functions

Displaying Mobile Link Information

To display Mobile Link information

Phone Enabled Services

To clear the watch's pairing information

Configuring Watch Alert Operation Settings

To configure watch alert operation settings

Animation

Supplementary Information

## Displaying Mobile Link Information

The Mobile Link information listed below can be checked by displaying it on the watch.


- Watch Bluetooth device name
- Watch Bluetooth device address
- Phone enabled services (usable Bluetooth services)

This information can be displayed in the watch's Setup Mode.

You also can perform the [watch pairing information clear](#) operation in the Setup Mode.

### To display Mobile Link information

1. In the Timekeeping Mode, press **C** five times.
  - This enters the Setup Mode. This displays the Bluetooth Device Name Screen shown below.

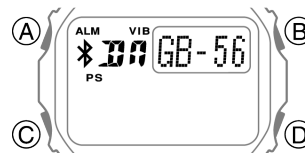



Bluetooth Device Name Screen

(The message "GB-5600A\*" will scroll from right to left.)

- If you do not perform any operation for about two or three minutes while in the Setup Mode, the watch will automatically return to the Timekeeping Mode.

2. Each press of **D** cycles between screens as shown below.

Bluetooth Device Name Screen

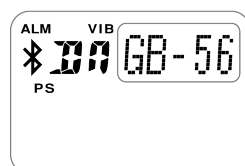


Bluetooth Device Address Screen



**Detailed Menu**

**Procedure Reference**

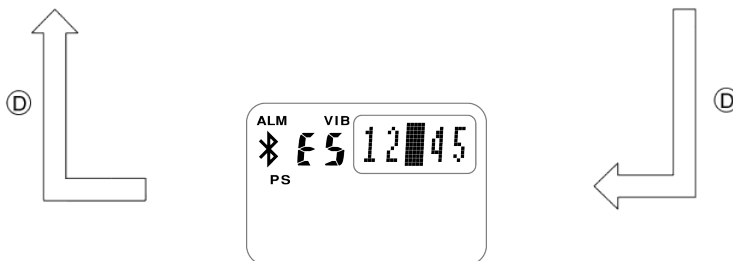


Enabled Services Screen

- The values on the Enabled Services Screen indicate the Bluetooth services that are available for use by the phone. For more details, see "[Phone Enabled Services](#)".
- You can go to the watch Alert Operation Setting Screen from any of the above screens. For more information, see "[Configuring Watch Alert Operation Settings](#)".

3. Press **C** to return to the Timekeeping Mode.

**Phone Enabled Services**

The Enabled Services Screen shows numbers that identify Bluetooth services enabled for the phone that is currently connected to the watch. On the example display below, the numbers 1, 2, 4, and 5 indicate enabled Bluetooth services.

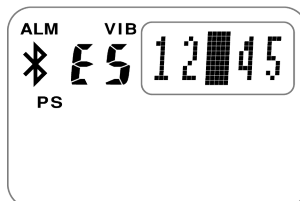

Enabled Services Screen

Each of the values on the Enabled Services Screen corresponds to a Bluetooth service.


Number	Bluetooth Service	Related Mobile Link Function
1	Time	<a href="#">Adjusting the Watch's Current Time to the Phone's Time</a>
2	Local Time Information (UTC Offset and DST information)	
3	Phone Alert Status	<a href="#">Incoming Call Notification Using Phone Finder</a>
4	Alert Notification	<a href="#">Alert Notification (Incoming Call, Incoming Mail, and Other Phone Events)</a>


Number	Bluetooth Service	Related Mobile Link Function
5	Find Me	<a href="#">Using Phone Finder</a> <a href="#">To check the connection from the phone</a>

### Note

If the watch is not paired with the phone, displaying the Enabled Services Screen will cause the message "NOT YET PAIRED!" to scroll from right to left on the display.

### To clear the watch's pairing information

- If the Bluetooth icon (  ) is displayed on the watch, perform one of the operations below to clear it. If the Bluetooth icon is not displayed on the watch, go directly to step 2 of this procedure.
  - Turn off the phone currently connected to the watch.
  - Perform the procedure under "[To disable the watch's Bluetooth manually](#)".
- In the Timekeeping Mode, press **C** five times.
  - This enters the Setup Mode. This displays the Bluetooth Device Name Screen shown below.

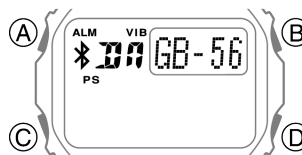

Bluetooth Device Name Screen

(The message "GB-5600A\*" will scroll from right to left.)

- Hold down **D** for about two seconds.
  - The message "NOT YET PAIRED!" will scroll from right to left on the display after pairing information is cleared.





# BLUETOOTH WATCH

## GB-5600AA/AB

User's Guide for Mobile Link Functions

for GALAXY

Main Menu

Read This First!

Getting Ready

Checking the Connection between the Watch and Phone

Using Mobile Link Functions

Setting Up Mobile Link Functions

Displaying Mobile Link Information

To display Mobile Link information

Phone Enabled Services

To clear the watch's pairing information

Configuring Watch Alert Operation Settings

To configure watch alert operation settings

Animation

Supplementary Information

## Configuring Watch Alert Operation Settings

You can also configure settings to control the type of alert performed by the watch for each type of phone notification. Setting items are shown in the table below.

This setting item:	Affects this type of alert:
a. Alert duration for notification from phone	All alerts
b. Animation display on/off	Incoming call alerts only
c. Alert method for notification of incoming calls	Incoming call alerts only
d. Alert method for notification of incoming mail	Incoming mail alerts only
e. Alert method for notification of other phone events	SNS and Calendar alerts only

### Note

The watch alert settings of certain types of notifications from the phone cannot be changed.

### To configure watch alert operation settings

- In the Timekeeping Mode, press **C** five times.
  - This enters the Setup Mode. This displays the Bluetooth Device Name Screen shown below.



Bluetooth Device Name Screen

(The message "GB-5600A\*" will scroll from right to left.)

- If you do not perform any operation for about two or three minutes while in the Setup Mode, the watch will automatically return to the Timekeeping Mode.

## Detailed Menu


## Procedure Reference

### Note


You can also perform step 2, below, while [any Setup Mode screen](#) is displayed.

2. In the Setup Mode, hold down **A** for about two seconds until [SET Hold] appears.
  - After a short while screen a (shown below) will appear.
3. Use **C** to select the screen whose settings you want to change.
  - Each press of **C** cycles through the screens in sequence (**a - b - c - d - e - f - a - ....**)

#### a. Alert duration for notification from phone

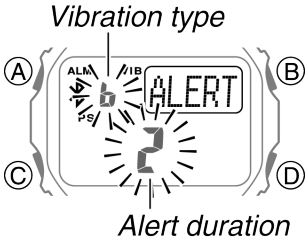Screen	Setting Procedure
<p><b>a.</b></p>  <p style="text-align: center;"><i>Alert duration</i></p>	<p>Each press of <b>D</b> cycles through the alert duration settings in the sequence [2], [3], [4] (seconds).</p> <p>Each press of <b>B</b> cycles through the vibration type settings in the sequence [A], [b], [C].</p> <p>After you change these settings, the watch will perform a demo vibration in accordance with your changes.</p>





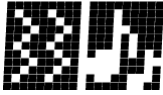
#### b. Animation display on/off

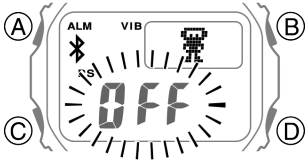
<p><b>b.</b></p> 	<p>Each press of <b>D</b> toggles animation display between [ON] (displayed) and [OFF] (not displayed). For more information, see "<a href="#">Animation</a>".</p>
--	--

#### c. Alert method for notification of incoming calls


#### d. Alert method for notification of incoming mail

#### e. Alert method for notification of other phone events
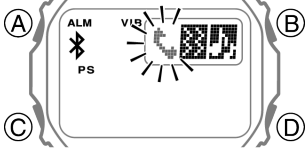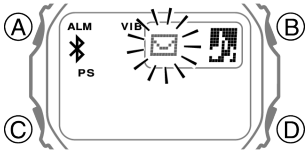
<p><b>c.</b></p> 	<p>Each press of <b>D</b> cycles through the icons described below.</p>  <p>Alert by vibration</p>
<p><b>d.</b></p> 	 <p>Alert by tone</p>
<p><b>e.</b></p>	

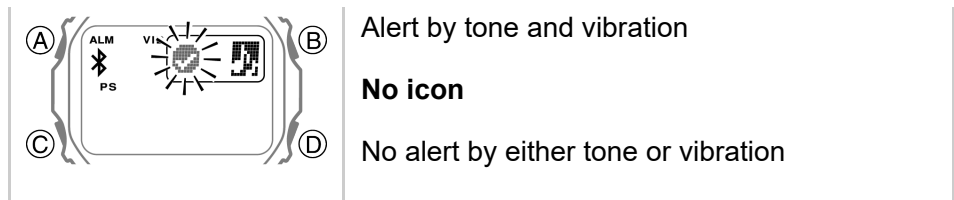

#### f. Alert method for watch alarm/timer

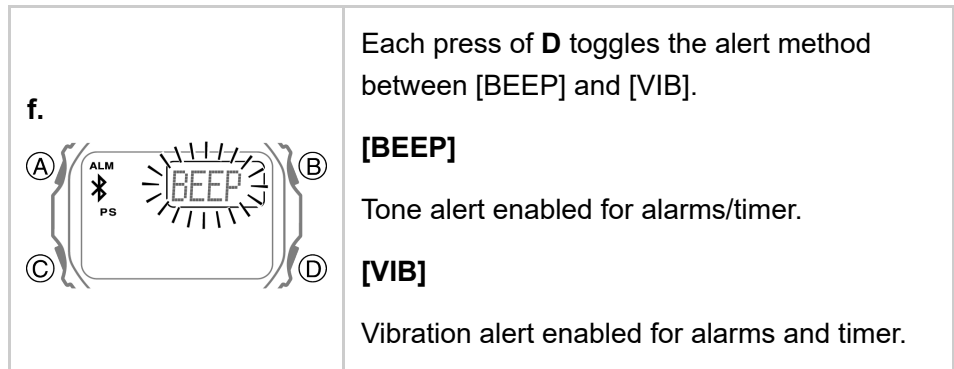


4. After the settings are the way you want, press **A**. You can do this while any of the setting screens (**a** through **f**) is displayed.
  - This returns to the Bluetooth Device Name Screen in step 1 of this procedure.
  - If you do not perform any operation while one of the setting screens (**a** through **f**) is displayed, the watch will automatically return to the Bluetooth Device Name Screen in step 1 of this procedure.
  
5. Press **C** to return to the Timekeeping Mode.


### Animation

You can [configure the watch to display text or an animation](#) as shown below when there is an incoming call on the phone.

When OFF

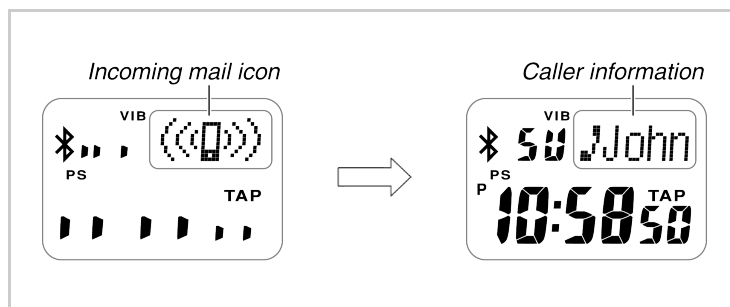

When ON

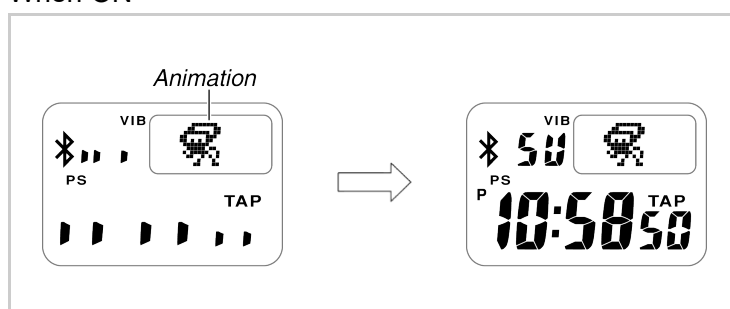





# BLUETOOTH WATCH

## GB-5600AA/AB

User's Guide for Mobile Link Functions

for GALAXY

Main Menu

Read This First!

Getting Ready

Checking the Connection between the Watch and Phone

Using Mobile Link Functions

Setting Up Mobile Link Functions

Supplementary Information

G-SHOCK+ app Settings

To clear the phone's pairing information

Supported Profiles

Detailed Menu

Procedure Reference

## G-SHOCK+ app Settings

### To clear the phone's pairing information

#### On the watch:

1. Check to confirm that the Bluetooth icon is not on the watch display. If it is, enter the Timekeeping Mode and then hold down **C** for about two seconds until the Bluetooth icon disappears.

#### On the phone:

2. On the top menu of the G-SHOCK+ app, tap the following items in sequence: "General" - "Delete pairing".
3. On the screen that appears, tap "Delete pairing".



# BLUETOOTH WATCH

## GB-5600AA/AB

User's Guide for Mobile Link Functions

GALAXY

Main Menu

### Read This First!

Checking the Pairing and Connection

Using Mobile Link Functions

Setting Up Mobile Link Functions

Supplementary Information

G-SHOCK+ app Settings

To clear the phone's pairing information

Supported Profiles

Detailed Menu

Procedure Reference

## Supported Profiles

The watch supports the Bluetooth profiles listed below.

- FMP Find Me Profile 1.0
- PASP Phone Alert Status Profile 1.0
- TIP Time Profile 1.0
- ANP Alert Notification Profile 1.0
- PXP Proximity Profile 1.0